


Conduit Spacer Assembly & Installation

ASSEMBLE CONDUIT SPACERS

Step 1

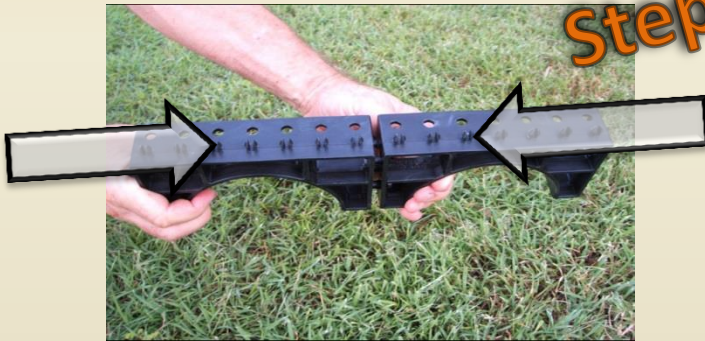

FIT EACH CONDUIT SPACER TOGETHER. IMPORTANT - ENSURE PINS / HOLES ARE IN LINE

Step 2

REPEAT PROCESS TO BUILD UPPER AND LOWER STRIP



Step 3

ASSEMBLE INTERMEDIATE STRIPS BY JOINING 2 STRIPS BACK-TO-BACK




NOW AVAILABLE PRE-ASSEMBLED TO SUIT YOUR PROJECT

Contact your distributor for information on pre-assembly of spacers for SPEEDY ON-SITE INSTALLATION

Conduit Spacer Assembly & Installation


INSTALL SPACERS

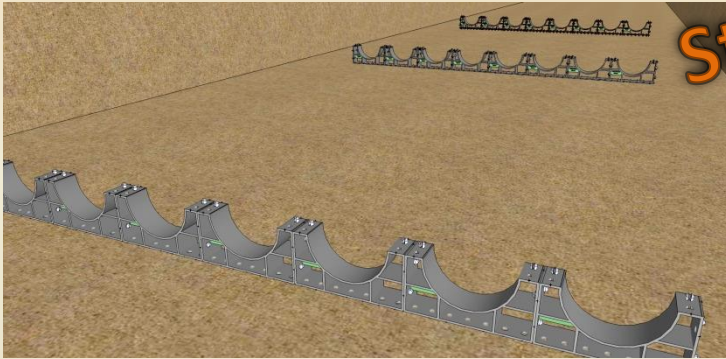


Step 1

INSTALL LOWER STRIP OF
CONDUIT SPACERS

LAY CONDUIT ONTO
CONDUIT SPACERS

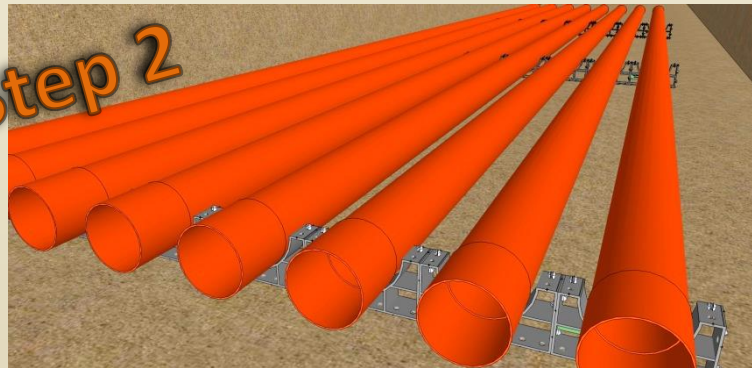

Step 2

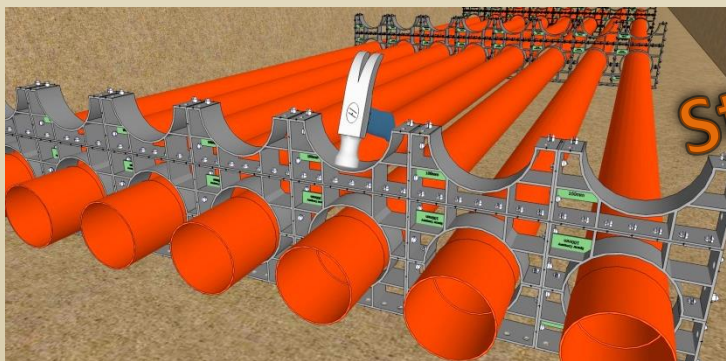

Step 3

INSTALL MIDDLE OR TOP
CONDUIT SPACERS BUILDING UP
ROWS AS REQUIRED

NOW AVAILABLE PRE-ASSEMBLED TO SUIT YOUR PROJECT

Contact your distributor for information on pre-assembly of
spacers for SPEEDY ON-SITE INSTALLATION